

UUS

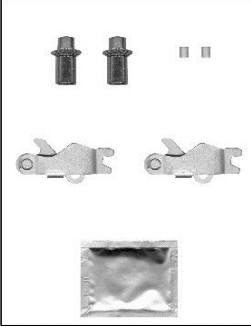
Käsipiduriklotside lukustus komplektid 2017

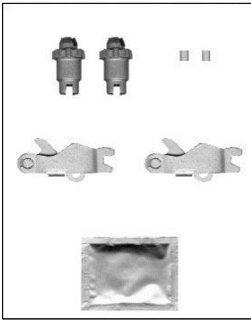

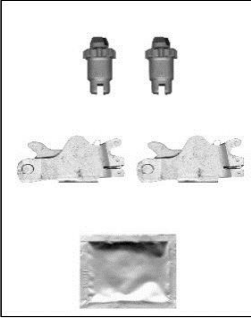



ISO 9001:2008
ISO 14001:2004


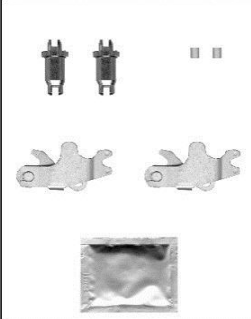

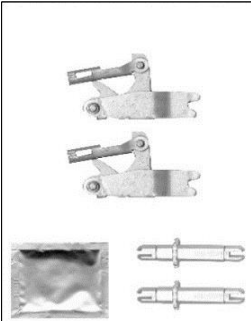
AUTOEKSPERT

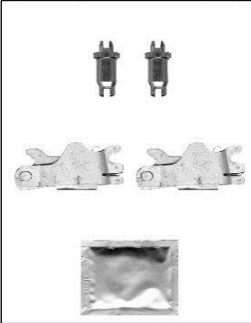
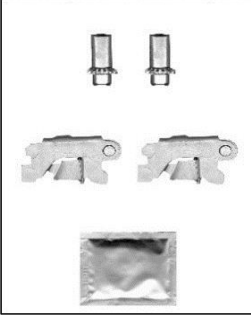
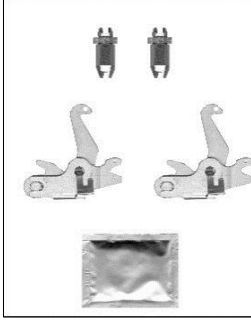
Käsi piduriklotside lukustus komplektid

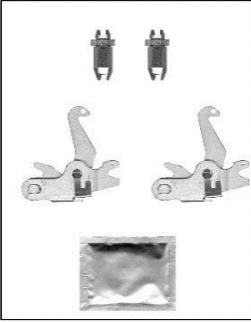
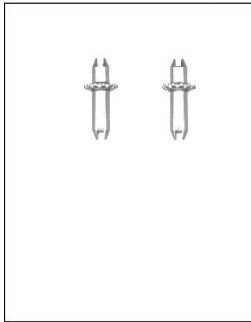
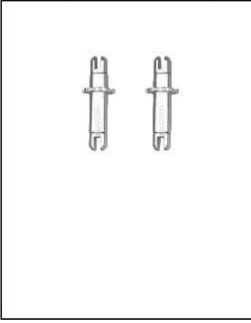
OJD Ref.	Make	Year	Shoe Dimension	Kit:	System:	Illustration	
120 53 001	CHRYSLER						
	Crossfire, Convertible	05.04-12.08	164.0 x 20	105-0874	ATE		
	Crossfire, Coupe	07.03-12.08	228.6 x 40	105-0874	ATE		
	MERCEDES						
	190 E (W201)	10.82-08.93	ø 165.0 x 20	105-0622	TRW		
	A-Class (W168)	07.97-08.04	ø 165.0 x 20	105-0773	TRW		
	A-Class (W169)	09.04-06.12	ø 165.0 x 20	105-0622	TRW		
	B-Class (W245)	03.05-11.11	ø 165.0 x 20	105-0622	TRW		
	C-Class (W202)	06.97-05.00	ø 165.0 x 20	105-0622	TRW		
	C-Class (CL203)	03.01-05.08	ø 164.0 x 20	105-0874	ATE		
	C-Class (S203)	03.01-08.07	ø 164.0 x 20	105-0874	ATE		
	C-Class (W203)	10.00-02.07	ø 164.0 x 20	105-0874	ATE		
	C-Class (C204)	06.11-	ø 164.0 x 25	105-0874	ATE		
	C-Class (S204)	08.07-08.14	ø 164.0 x 25	105-0874	ATE		
	C-Class (W204)	01.07-01.14	ø 164.0 x 25	105-0874	ATE		
	CLC-Class (CL203)	05.08-06.11	ø 164.0 x 20	105-0874	ATE		
	CLK (C208)	03.98-06.02	ø 165.0 x 20	105-0622	TRW		
	CLK (A209)	02.03-03.10	ø 164.0 x 20	105-0874	ATE		
	CLK (C209)	09.02-05.09	ø 164.0 x 20	105-0874	ATE		
	CLS (C219)	07.08-12.10	ø 180.0 x 25	105-0865	ATE		
	CLS (C218)	01.11-	ø 180.0 x 25	105-0874	ATE		
	CLS Shooting Brake (X218)	10.12-	ø 180.0 x 25	105-0874	ATE		
	E-Class (A124)	06.93-03.98	ø 165.0 x 20	105-0622	TRW		
	E-Class (C124)	03.87-06.97	ø 165.0 x 20	105-0622	TRW		
	E-Class (S124)	09.85-06.96	ø 165.0 x 20	105-0622	TRW		
	E-Class (W124)	12.84-06.95	ø 165.0 x 20	105-0622	TRW		
	E-Class (A207)	01.10-	ø 164.0 x 25	105-0874	ATE		
	E-Class (C207)	01.09-	ø 164.0 x 25	105-0874	ATE		
	E-Class (S210)	06.96-03.03	ø 164.0 x 25	105-0867	ATE		
	E-Class (W210)	02.96-03.02	ø 164.0 x 25	105-0867	ATE		
	E-Class (W210)	06.95-03.02	ø 165.0 x 20	105-0622	TRW		
	E-Class (S211)	03.03-07.09	ø 180.0 x 25	105-0865	ATE		
E-Class (W211)	03.02-12.08	ø 180.0 x 25	105-0865	ATE			
E-Class (S212)	08.09-	ø 180.0 x 25	105-0874	ATE			
E-Class (W212)	01.09-	ø 180.0 x 25	105-0874	ATE			
GLK-Class (X204)	06.08-06.15	ø 180.0 x 25	105-0874	ATE			
S-Class (C140)	09.92-02.99	ø 164.0 x 25	105-0537	ATE			
S-Class (W140)	02.91-10.98	ø 164.0 x 25	105-0716	ATE			
S-Class (W140)	02.91-10.98	ø 164.0 x 25	105-0867	ATE			
S-Class (C215)	03.99-03.06	ø 180.0 x 25	105-0878	ATE			
S-Class (W220)	10.98-08.05	ø 180.0 x 25	105-0878	ATE			
SL (R129)	09.92-10.01	ø 165.0 x 20	105-0622	TRW			
SL (R230)	10.01-01.12	ø 180.0 x 25	105-0865	ATE			
SLK (R170)	09.96-04.04	ø 165.0 x 20	105-0622	TRW			
SLK (R171)	03.04-02.11	ø 164.0 x 20	105-0874	ATE			
V-Class (638/2)	09.96-07.03	ø 178.0 x 20	105-0622	Bosch			
V-Class (W447)	03.14-	ø 186.0 x 20	105-0874	Bosch			
Vaneo (414)	02.02-07.05	ø 164.0 x 20	105-0874	ATE			
Viano (W639)	09.03-	ø 185.0 x 20	105-0622	Bosch			
Vito (638)	02.96-07.03	ø 178.0 x 20	105-0622	Bosch			
Vito (W639)	09.03-	ø 185.0 x 20	105-0622	Bosch			
Vito (W447)	10.14-	ø 186.0 x 20	105-0874	Bosch			

OJD Ref.	Make	Year	Shoe Dimension	Kit:	System:	Illustration	
120 53 002	MERCEDES						
	G-Class Convertible (W463)	12.90-09.97	ø 160.0 x 40	105-0774	ATE, Bosch		
	G-Class Hardtop (W463)	09.89-	ø 160.0 x 40	105-0774	ATE, Bosch		
	Sprinter (901/902/903)	01.95-05.06	ø 160.0 x 40	105-0774	ATE, Bosch		
	Sprinter (904)	02.96-05.06	ø 170.0 x 40	105-0775	ATE		
	Sprinter (906)	06.06-	ø 180.0 x 25	105-0868	ATE		
	Sprinter (906)	06.06-	ø 180.0 x 25	105-0004	ATE		
	VW						
	Crafter 30-35 Bus	04.06-	ø 180.0 x 25	105-0868	ATE		
	Crafter 30-50 Box/Flatbed	04.06-	ø 180.0 x 25	105-0004	ATE		
	Crafter 30-50 Box/Flatbed	04.06-	ø 180.0 x 25	105-0868	ATE		
	LT 28-35 II Box/Flatbed	05.96-07.06	ø 160.0 x 40/ø 170.0 x 40	105-0774	ATE		
	LT 28-35 II Box/Flatbed	05.96-07.06	ø 160.0 x 40/ø 170.0 x 40	105-0775	ATE		
	LT 28-35 II Bus	05.96-07.06	ø 160.0 x 40/ø 170.0 x 40	105-0774	ATE		
	120 53 003	BMW					
3-series (E36) Convertible		01.94-04.99	ø 180.0 x 25	105-0708	ATE		
3-series (E36) Coupe		10.92-04.99	ø 180.0 x 25	105-0621	ATE		
3-series (E36) Saloon		08.94-02.98	ø 180.0 x 25	105-0621	ATE		
5-series (E28)		05.81-06.90	ø 180.0 x 25	105-0621	ATE		
5-series (E34) Saloon		01.88-09.95	ø 180.0 x 25	105-0621	ATE		
5-series (E34) Touring		11.91-01.97	ø 180.0 x 25	105-0621	ATE		
Z3 (E36)		03.97-06.03	ø 180.0 x 25	105-0621	ATE		
120 53 004	PORSCHE						
	Cayenne (92A)	06.10-	ø 210.0 x 30	105-0041			
	Panamera (970)	07.13-	ø 180.0 x 25				
	VW						
Touareg (7P5)	01.10-	ø 210.0 x 30	105-0041				
120 53 005	AUDI						
	Q7 (4L)	03.06-	ø 210.0 x 30	105-0841	Brembo		
	BMW						
	1-series (E81)	09.06-09.12	ø 160.0 x 20	105-0801	ATE		
	1-series (E82)	09.09-10.13	ø 160.0 x 20	105-0801	ATE		
	1-series (E87)	11.03-09.12	ø 160.0 x 20	105-0801	ATE		
	1-series (E87)	03.07-09.12	ø 185.0 x 20	105-0621	ATE		
	1-series (E88)	03.08-12.13	ø 160.0 x 20	105-0801	ATE		
	1-series (E88)	09.08-12.13	ø 185.0 x 20	105-0621	ATE		
	3-series (E46)	01.05-12.11	ø 160.0 x 20	105-0801	ATE		
	3-series (E46)	09.00-02.05	ø 185.0 x 20	105-0621	ATE		
	3-series (E46)	10.99-12.07	ø 185.0 x 30	105-0841	ATE		
	3-series (E90)	01.05-12.11	ø 185.0 x 20	105-0621	ATE		
	3-series (E90)	01.05-10.11	ø 160.0 x 20	105-0801	ATE		

OJD Ref.	Make	Year	Shoe Dimension	Kit:	System:	Illustration	
(120 53 005)	BMW						
	3-series (E91)	12.04-06.12	ø 160.0 x 20	105-0801	ATE		
	3-series (E91)	12.04-06.12	ø 185.0 x 20	105-0621	ATE		
	3-series (E92)	06.06-12.13	ø 185.0 x 20	105-0621	ATE		
	3-series (E93)	01.07-12.13	ø 185.0 x 20	105-0621	ATE		
	5-series (E39) Saloon	11.95-06.03	ø 185.0 x 20	105-0621	ATE		
	5-series (E39) Saloon	10.98-06.03	ø 185.0 x 30	105-0841	ATE		
	5-series (E39) Touring	01.97-05.04	ø 185.0 x 20	105-0621	ATE		
	5-series (E60)	07.03-03.10	ø 185.0 x 30	105-0841	ATE		
	5-series (E61)	06.04-12.10	ø 185.0 x 30	105-0841	ATE		
	5 Gran Turismo (F07GT)	09.08-	ø 185.0 x 30	105-0841	ATE		
	6-series (E24)	12.77-04.89	ø 185.0 x 20	105-0619	ATE		
	6-series (E24)	04.84-02.89	ø 185.0 x 20	105-0621	ATE		
	6-series (E63)	01.04-07.10	ø 185.0 x 30	105-0841	ATE		
	6-series (E64)	04.04-07.10	ø 185.0 x 30	105-0841	ATE		
	7-series (E23)	05.77-08.86	ø 185.0 x 20	105-0621	ATE		
	7-series (E32)	09.86-09.94	ø 185.0 x 20	105-0621	ATE		
	7-series (E38)	10.94-11.01	ø 185.0 x 20	105-0621	ATE		
	7-series (E65/E66/E67)	11.01-12.09	ø 185.0 x 30	105-0841	ATE		
	7-series (F01/F02)	02.08-12.15	ø 185.0 x 30	105-0841	ATE		
	8-series (E31)	02.90-12.99	ø 185.0 x 20	105-0621	ATE		
	X3 (E83)	01.03-12.11	ø 185.0 x 30	105-0841	ATE		
	X5 (E53)	05.00-12.06	ø 185.0 x 30	105-0841	ATE		
	X5 (E70)	02.06-03.10	ø 185.0 x 30	105-0841	ATE		
	X6 (E71/E72)	06.07-06.14	ø 185.0 x 30	105-0841	ATE		
	Z4 (E85)	03.06-02.09	ø 185.0 x 30	105-0841	ATE		
	Z4 (E86)	03.06-01.09	ø 160.0 x 20	105-0801	ATE		
	Z4 (E86)	03.06-01.09	ø 185.0 x 30	105-0841	ATE		
	Z8 (E52)	06.00-06.03	ø 185.0 x 20	105-0621	ATE		
	CITRÖEN						
	Evasion	06.94-07.02	ø 180.0 x 30	105-0793	ATE		
	FIAT						
	Ulysse (220#)	02.95-08.02	ø 180.0 x 30	105-0793	ATE		
	LAND ROVER						
	Range Rover III	03.02-08.12	ø 185.0 x 30	105-0841	ATE		
	MERCEDES						
	GL-Class (X164)	09.06-	ø 210.0 x 30	105-0841	ATE		
	M-Class (W164)	07.05-12.11	ø 210.0 x 30	105-0841	ATE		
	R-Class (#251)	01.06-	ø 210.0 x 30	105-0841	ATE		
	PEUGEOT						
	406 Break/Saloon	11.95-12.04	ø 180.0 x 30	105-0793	ATE		
	406 Coupe	03.97-12.04	ø 180.0 x 30	105-0793	ATE		
	607	02.00-	ø 180.0 x 30	105-0793	ATE		
	806	06.94-08.02	ø 180.0 x 30	105-0793	ATE		
	VW						
	Multivan V	04.03-	ø 185.0 x 30	105-0841	ATE		
	Touareg (7LA/7L6/7L7)	10.02-11.06	ø 210.0 x 30	105-0841	Brembo		
	Transporter V	04.03-	ø 185.0 x 30	105-0841	ATE		

OJD Ref.	Make	Year	Shoe Dimension	Kit:	System:	Illustration
120 53 006	MERCEDES					
	S-Class (C216)	05.06-12.13	ø 180.0 x 25	105-0874	ATE	
	S-Class (W221)	10.05-12.13	ø 180.0 x 25	105-0867	ATE	
120 53 007	BMW					
	3-series (E21)	01.78-08.82	ø 160.0 x 25	105-0620	ATE	
	3-series (E30) Convertible	12.85-10.93	ø 160.0 x 25	105-0620	ATE	
	3-series (E30) Saloon	09.82-12.91	ø 160.0 x 25	105-0620	ATE	
	3-series (E30) Saloon	07.86-01.92	ø 160.0 x 25	105-0619	ATE	
	3-series (E30) Touring	09.87-06.94	ø 160.0 x 25	105-0620	ATE	
	3-series (E36) Compact	03.94-08.00	ø 160.0 x 25	105-0708	ATE	
	3-series (E36) Convertible	03.93-04.99	ø 160.0 x 25	105-0708	ATE	
	3-series (E36) Coupe	03.92-04.99	ø 160.0 x 25	105-0708	ATE	
	3-series (E36) Saloon	09.90-02.98	ø 160.0 x 25	105-0708	ATE	
	3-series (E36) Touring	01.95-10.99	ø 160.0 x 25	105-0708	ATE	
	5-series (E12)	08.73-08.81	ø 160.0 x 25	105-0619	ATE	
	Z1	06.88-06.91	ø 160.0 x 25	105-0708	ATE	
	Z3 (E36)	10.95-06.03	ø 160.0 x 25	105-0708	ATE	
Z4 (E85)	02.03-12.08	ø 160.0 x 25	105-0708	ATE		
120 53 008	CITRÖEN					
	Jumper (230#)	02.94-04.02	ø 172.0 x 42	105-0851	TRW	
	Jumper (244#)	04.02-	ø 172.0 x 42	105-0851	TRW	
	FIAT					
	Ducato (230#)	03.94-04.02	ø 172.0 x 42	105-0851	TRW	
	Ducato (244#)	04.02-	ø 172.0 x 42	105-0851	TRW	
	PEUGEOT					
	Boxer Box (230L)	03.94-04.02	ø 172.0 x 42	105-0851	TRW	
	Boxer Box (244)	04.02-	ø 172.0 x 42	105-0851	TRW	
	Boxer Bus (230P)	03.94-04.02	ø 172.0 x 42	105-0851	TRW	
Boxer Bus (244/Z#)	04.02-	ø 172.0 x 42	105-0851	TRW		
Boxer Flatbed (ZCT#)	03.94-04.02	ø 172.0 x 42	105-0851	TRW		
Boxer Flatbed (244)	04.02-	ø 172.0 x 42	105-0851	TRW		
120 53 009	VOLVO					
	780	04.86-07.90	ø 180.0 x 25	105-0720	ATE	
	850	06.91-10.97	ø 180.0 x 25	105-0720	ATE	
	C70 I	03.97-10.05	ø 180.0 x 25	105-0720	ATE	
	S70 (LS)	11.96-11.00	ø 180.0 x 25	105-0720	ATE	
	V70 I	01.97-05.00	ø 180.0 x 25	105-0720	ATE	

OJD Ref.	Make	Year	Shoe Dimension	Kit:	System:	Illustration
120 53 010	BMW					
	1-series (F20)	11.10-	ø 160.0 x 20	105-0801	ATE	
	1-series (F21)	12.11-	ø 160.0 x 20	105-0801	ATE	
120 53 011	CITRÖEN					
	Jumper (250#)	04.06-	ø 172.0 x 42	105-0875	Bendix	
	FIAT					
	Ducato (250#/290#)	07.06-	ø 172.0 x 42	105-0875	Bendix	
	PEUGEOT					
	Boxer Box (250)	04.06-	ø 172.0 x 42	105-0875	Bendix	
Boxer Flatbed (250)	04.06-	ø 172.0 x 42	105-0875	Bendix		
120 53 012	OPEL					
	Calibra A	03.92-07.97	ø 160.0 x 25	105-0711	ATE	
	Calibra A	06.90-07.97	ø 160.0 x 25	105-0667	ATE	
	Monza A	02.78-08.86	ø 160.0 x 25	105-0667	ATE	
	Omega A Caravan	09.86-03.94	ø 160.0 x 25	105-0667	ATE	
	Omega A Caravan	09.88-03.94	ø 160.0 x 25	105-0667	ATE	
	Omega A Caravan	09.90-03.94	ø 160.0 x 25	105-0667	ATE	
	Omega A Caravan	03.87-03.94	ø 160.0 x 25	105-0667	ATE	
	Omega A Caravan	03.87-04.94	ø 160.0 x 25	105-0667	ATE	
	Omega A Saloon	09.86-03.94	ø 160.0 x 25	105-0667	ATE	
	Omega B	03.94-07.01	ø 160.0 x 25	105-0667	ATE	
	Senator A	02.78-08.87	ø 160.0 x 25	105-0667	ATE	
	Senator B	09.87-09.93	ø 160.0 x 25	105-0667	ATE	
	Vectra A Hatchback	04.88-11.95	ø 160.0 x 25	105-0667	ATE	
	Vectra A Saloon	09.88-11.95	ø 160.0 x 25	105-0667	ATE	
	Vectra A Saloon	02.93-11.95	ø 160.0 x 25	105-0667	ATE	
	Vectra B Caravan	11.96-07.03	ø 160.0 x 25	105-0711	ATE	
	Vectra B Hatchback	10.95-07.03	ø 160.0 x 25	105-0711	ATE	
	Vectra B Saloon	10.95-04.02	ø 160.0 x 25	105-0711	ATE	
	SAAB					
	9-3 Convertible (YS3D)	02.98-08.03	ø 160.0 x 25	105-0711	ATE	
	9-3 Hatchback (YS3D)	02.98-09.02	ø 160.0 x 25	105-0711	ATE	
	9-5 Estate (YS3E)	10.98-12.09	ø 160.0 x 25	105-0711	ATE	
	9-5 Saloon (YS3E)	09.97-12.09	ø 160.0 x 25	105-0711	ATE	
	900 II	07.93-02.98	ø 160.0 x 25	105-0711	ATE	
	VAUXHALL					
	Astra II Estate	01.90-08.91	ø 160.0 x 25	105-0629	ATE	
	Astra II Hatchback	09.86-08.91	ø 160.0 x 25	105-0667	ATE	
	Astra III Convertible	03.93-10.94	ø 160.0 x 25	105-0711	ATE	
	Astra III Estate	09.91-02.98	ø 160.0 x 25	105-0710	ATE	

OJD Ref.	Make	Year	Shoe Dimension	Kit:	System:	Illustration
(120 53 012)	VAUXHALL					
	Calibra	06.90-07.97	ø 160.0 x 25	105-0667	ATE	
	Calibra	03.92-07.97	ø 160.0 x 25	105-0711	ATE	
	Carlton III	09.86-03.94	ø 160.0 x 25	105-0667	ATE	
	Cavalier III Hatchback	09.88-11.95	ø 160.0 x 25	105-0711	ATE	
	Cavalier III Hatchback	09.88-06.94	ø 160.0 x 25	105-0667	ATE	
	Cavalier III Saloon	09.88-11.95	ø 160.0 x 25	105-0711	ATE	
	Cavalier III Saloon	08.88-11.94	ø 160.0 x 25	105-0667	ATE	
	Omega	03.94-07.01	ø 160.0 x 25	105-0667	ATE	
	Royale	02.78-12.86	ø 160.0 x 25	105-0667	ATE	
	Senator I	09.84-08.87	ø 160.0 x 25	105-0667	ATE	
	Senator II	09.87-09.93	ø 160.0 x 25	105-0667	ATE	
	Vectra I Estate	08.95-03.02	ø 160.0 x 25	105-0711	ATE	
	Vectra I Hatchback	08.95-07.03	ø 160.0 x 25	105-0711	ATE	
Vectra I Saloon	08.95-03.02	ø 160.0 x 25	105-0711	ATE		
102 53 020	VOLVO					
	240 Estate	08.74-12.93	160.0 x 25	105-0594	ATE	
	240 Saloon	08.74-12.93	160.0 x 25	105-0594	ATE	
	260	08.74-07.82	160.0 x 25	105-0594	ATE	
	740 Estate	05.85-07.92	160.0 x 25	105-0594	ATE without multi-link	
	740 Saloon	08.83-07.92	160.0 x 25	105-0594	ATE without multi-link	
	760 Estate	08.84-07.92	160.0 x 25	105-0594	ATE	
	780	04.86-07.90	160.0 x 25	105-0594	ATE	
	940 I	08.90-12.98	160.0 x 25	105-0594	ATE without multi-link	
	940 II	08.94-10.98	160.0 x 25	105-0594	ATE without multi-link	
	960 I	08.90-07.94	160.0 x 25	105-0594	ATE without multi-link	
	960 II	07.94-12.96	160.0 x 25	105-0594	ATE without multi-link	
102 53 021	VOLVO					
	780	04.86-07.90	180.0 x 25	105-0720	ATE	
	850	06.91-10.97	180.0 x 25	105-0720	ATE	
	C70 I	03.97-10.05	180.0 x 25	105-0720	ATE	
	S70 (LS)	11.96-11.00	180.0 x 25	105-0720	ATE	
	S80 I	05.98-07.06	178.0 x 25	105-0831	TRW	
	V70 I (except 4WD)	01.97-05.00	180.0 x 25	105-0720	ATE	
	V70 I (4WD)	11.96-05.00	178.0 x 25	105-0869	TRW	



AUTOEKSPERT